


Wireless LED Steady/ Flashing Tower Light

QTG-WIZ

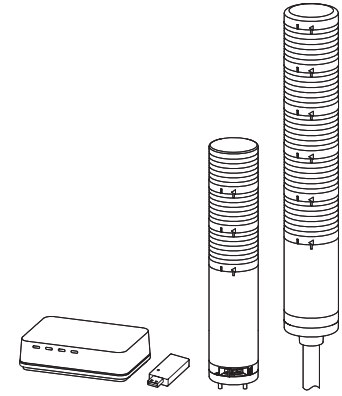

Thank you for purchasing Qlight's products. Please read this user manual carefully prior to installation and operation to ensure safe and correct use.



⚠ Precautions for Safety

Failure to follow the instructions below may cause a loss of life or serious physical injury.

1. During wiring or maintenance, please completely turn off the power of the product. (Failure to follow this may lead to an electric shock.)
2. Do not install the product in locations that subjects it to excessive dust or water other than the conditions designated by the IP protection ratings indicated for each product. (Failure to follow these instructions may cause a fire to the product, electric shock, physical injury, malfunction or damage to the product.)
3. Do not alter or repair this product. If maintenance or repair service is required, please contact your local Qlight contact point. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
4. Please apply the correct voltage to the product. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
5. When the product is applied to a condition that may impact lives or property, please make sure to have a double safety device. (Failure to follow this may cause damage to property, fire, electric shock and loss of life.)

⚠ Precautions for Correct Use

Failure to follow the proper instructions may cause damage to property, the product, or malfunction of the product that would void the warranty.

1. Please remove any objects that can interrupt ventilation around the product.
2. Please turn off the power of the product immediately if it fails to operate properly.
3. Carefully wire the product according to each product's specification.
4. Please be careful in preventing chemicals such as thinner, benzene, etc. in contact with the surface of the product.
5. Do not apply excessive force/impact to the product.
6. Failure to follow any of the instructions above may cause malfunction or damage to the product, fire, and electric shock.

Ordering Specifications

| QTG60L-WIZ | 3 | 24 | RAG | LW18 |
|-------------------|---------------|---------------|---------|-------------------|
| [Model number] | [Layer count] | [Voltage] | [Color] | [Mounting option] |
| • QTG60L-WIZ | • 1 Layer | • 24-DC24V | R-Red | • (None) |
| • QTG60L-WIZ-BZ | • 2 Layers | • 110/220 | A-Amber | - Standard type |
| • QTG60LF-WIZ | • 3 Layers | - AC110V-220V | G-Green | • Mounting type |
| • QTG60LF-WIZ-BZ | • 4 Layers | | B-Blue | - LB18 - LW18 |
| • QTGA60L-WIZ | • 5 Layers | | W-White | - QZ18 - SZ18 |
| • QTGA60L-WIZ-BZ | | | | - QL18 - SL18 |
| • QTGA60LF-WIZ | | | | |
| • QTGA60LF-WIZ-BZ | | | | |

| QTG70L-WIZ | 3 | 110/220 | RAG | LW24 |
|-------------------|---------------|---------------|---------|-------------------|
| [Model number] | [Layer count] | [Voltage] | [Color] | [Mounting option] |
| • QTG70L-WIZ | • 1 Layer | • 24-DC24V | R-Red | • (None) |
| • QTG70L-WIZ-BZ | • 2 Layers | • 110/220 | A-Amber | - Standard type |
| • QTG70LF-WIZ | • 3 Layers | - AC110V-220V | G-Green | • Mounting type |
| • QTG70LF-WIZ-BZ | • 4 Layers | | B-Blue | - LB24 - LW24 |
| • QTGA70L-WIZ | • 5 Layers | | W-White | - QZ24 - SZ24 |
| • QTGA70L-WIZ-BZ | | | | - QL24 - SL24 |
| • QTGA70LF-WIZ | | | | |
| • QTGA70LF-WIZ-BZ | | | | |



Please scan the QR code for more detailed product information.

www.qlight.com

Ordering Specifications





• QTG60ML-WIZ

| QTG60ML-WIZ | 3 | 110/220 | RAG |
|--------------------|---------------|---------------|---------|
| [Model number] | [Layer count] | [Voltage] | [Color] |
| • QTG60ML-WIZ | • 1 Layer | • 24-DC24V | R-Red |
| • QTG60ML-WIZ-BZ | • 2 Layers | • 110/220 | A-Amber |
| • QTG60MLF-WIZ | • 3 Layers | - AC110V-220V | G-Green |
| • QTG60MLF-WIZ-BZ | • 4 Layers | | B-Blue |
| • QTGA60ML-WIZ | • 5 Layers | | W-White |
| • QTGA60ML-WIZ-BZ | | | |
| • QTGA60MLF-WIZ | | | |
| • QTGA60MLF-WIZ-BZ | | | |

• QTG70ML-WIZ

| QTG70ML-WIZ | 3 | 12 | RAG |
|--------------------|---------------|---------------|---------|
| [Model number] | [Layer count] | [Voltage] | [Color] |
| • QTG70ML-WIZ | • 1 Layer | • 24-DC24V | R-Red |
| • QTG70ML-WIZ-BZ | • 2 Layers | • 110/220 | A-Amber |
| • QTG70MLF-WIZ | • 3 Layers | - AC110V-220V | G-Green |
| • QTG70MLF-WIZ-BZ | • 4 Layers | | B-Blue |
| • QTGA70ML-WIZ | • 5 Layers | | W-White |
| • QTGA70ML-WIZ-BZ | | | |
| • QTGA70MLF-WIZ | | | |
| • QTGA70MLF-WIZ-BZ | | | |

- Wireless LED Steady/Flashing Tower light has monitoring and controlling feature via PC that consists of USB DONGLE and GATEWAY.

| Application Software | USB DONGLE | GATEWAY | ROUTER (wireless signaling device) |
|--|--|---|--|
|  |  |  |  |


■ Description

| No. | Item | Description |
|-----|--|---|
| 1 | PC and mobile Application | PC Application would be a comprehensive control system by enabling the setting, monitoring, control and log analysis of the wireless signaling device. C# based application and software developer's API are provided. Mobile application can help to expand utility manager's coverage. |
| 2 | USB DONGLE (WIZ32) | USB DONGLE (WIZ32) can connect up to 32 wireless signaling device and is connected to the PC through a USB port in serial communication. It does not require a separate installation but simply insertion into a USB port for use. Note : USB DONGLE does NOT support Mobile application. |
| 3 | GATEWAY (GW768) | GATEWAY (GW768) can connect up to 32 wireless signaling device. Since it is possible to extend up to 24 GATEWAYs with a LAN ROUTER, they can connect up to 768 wireless signaling device. Note : GATEWAY supports Mobile application. |
| 4 | ROUTER (A wireless signal information device) | A wireless signaling device replaces an existing signaling device and converts the status data of production into wireless one so the control tower can control the status information of production equipment more easily and quickly. It functions to transmit (send) the status information of production equipment wirelessly and help the control tower control the wireless signaling device and send specified information to a worker. |

Components of wireless system


1. Connection through USB DONGLE

- USB DONGLE can be easily inserted in the PC and this is a method suitable for building a small-sized single wireless network (up to 32 wireless control display lamps can be connected).

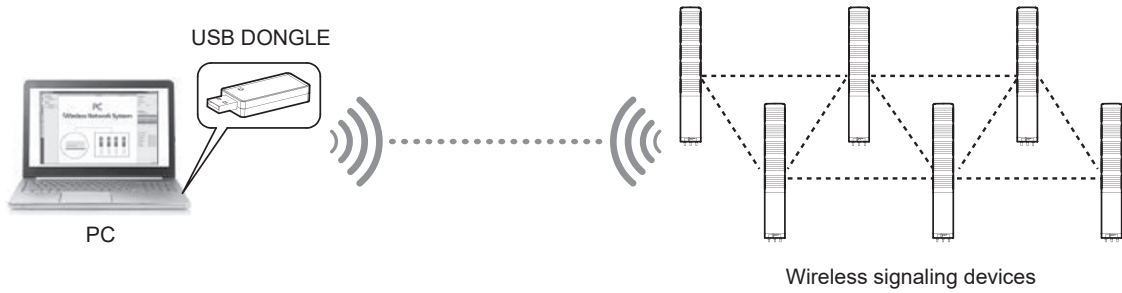

2. Connection through GATEWAY


- Up to 768 wireless control indicators can be connected by adopting multiple GATEWAYS. This is suitable for large-scale business sites.
- Smart phone can monitor or control the status of signaling devices.

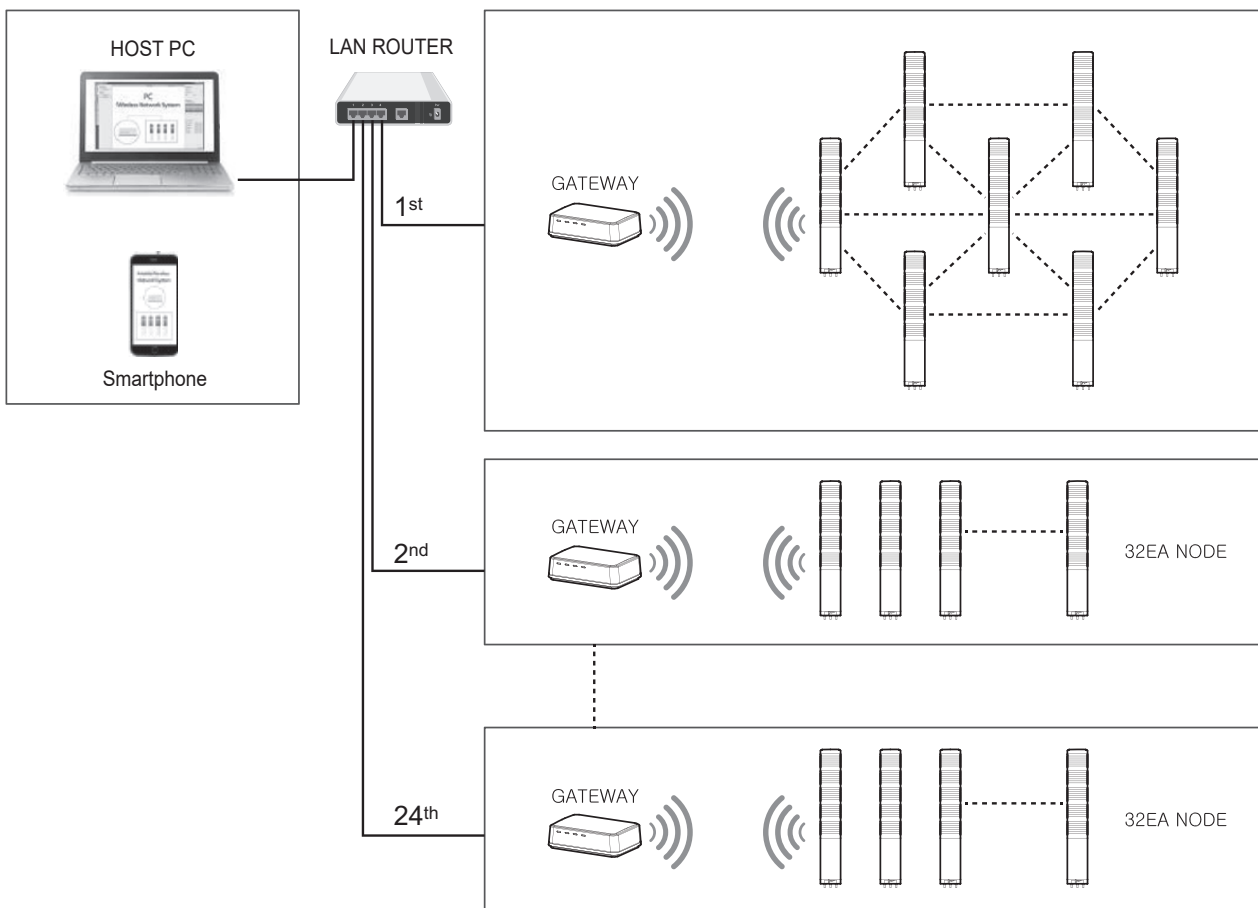

Information of wireless system

1. ROUTER(Wireless Signaling Device)

- The status information of the production equipment can be recognized by using an external contact and the status information are transmitted to USB DONGLE or GATEWAY. ROUTER can receive control signal from USB DONGLE or GATEWAY.
- Please refer to wireless information table on the label of the product.

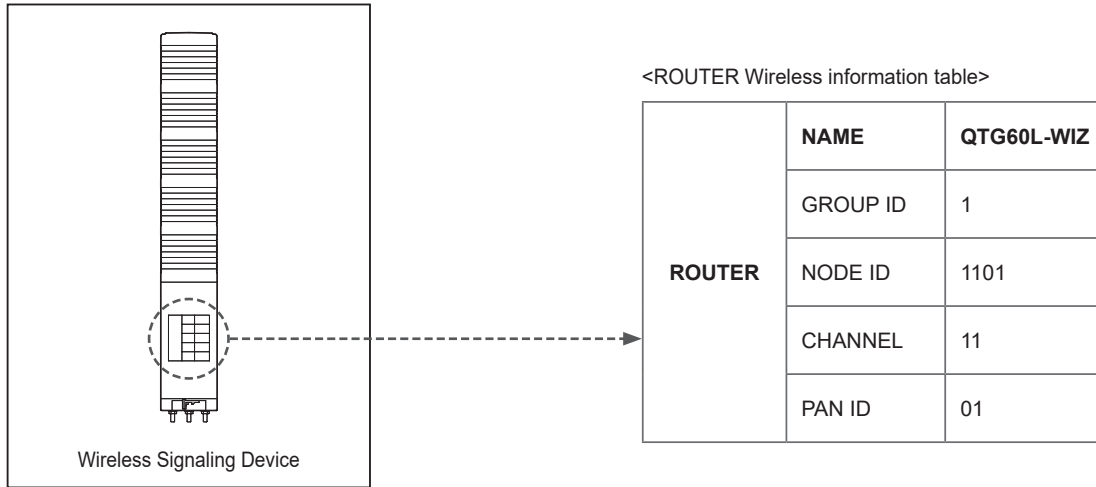


- ROUTER Wireless information table reference

| | NAME | Model name |
|--------|----------|---|
| ROUTER | GROUP ID | <ul style="list-style-type: none"> • Designated GROUP ID by customer. Possible to set 1 to 24 GROUPS. • It must be set as same as receiver(USB DONGLE, GATEWAY). |
| | NODE ID | <ul style="list-style-type: none"> • Designated NODE ID(Product ID) by customer. 32 ID's are available. • Referring 1101, 11 represents channel number. NODE ID configuration is related to the channel number. (recommended) |
| | CHANNEL | <ul style="list-style-type: none"> • Can select up-to 16 channels from 11 to 26. It must be configured same as receivers(GATEWAY and USB DONGLE). |
| | PAN ID | <ul style="list-style-type: none"> • PAN ID can be set from 0 to 65535. It is wireless network identifier as an unique customer's number and designated by manufacturer. |

2. USB DONGLE

- USB DONGLE is a wireless transmitter & receiver that is suitable for a small network with less than 32 wireless signaling devices.
- Please refer to wireless information table on the label of the product.

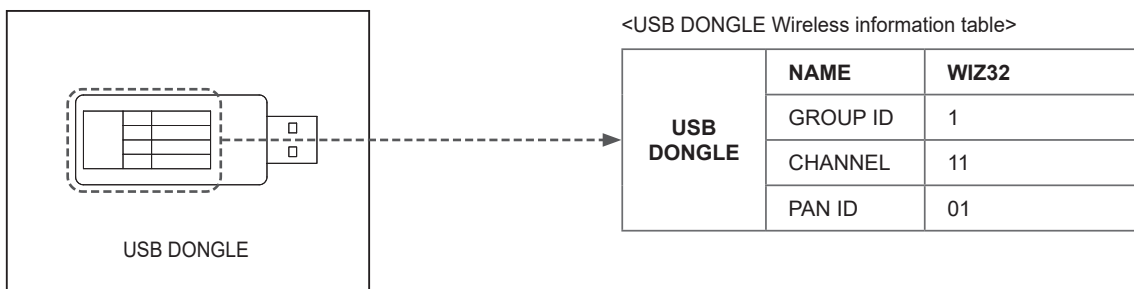


Information of wireless system

• USB DONGLE Wireless information table reference

| | | |
|------------|----------|---|
| USB DONGLE | NAME | Model name |
| | GROUP ID | <ul style="list-style-type: none"> • Designated GROUP ID by customer. Possible to set 1 to 24 GROUPS. • Possible to use single unit per PC. GROUP ID must NOT be same as GATEWAY. • It must be set as same as ROUTER(Wireless Signaling Device). |
| | CHANNEL | <ul style="list-style-type: none"> • Can select up-to 16 channels from 11 to 26. It must be configured same as ROUTER(Wireless Signaling Device). |
| | PAN ID | <ul style="list-style-type: none"> • PAN ID can be set from 0 to 65535. It is wireless network identifier as an unique customer's number and designated by manufacturer. |

3. GATEWAY

- Suitable for large-scaled network over 32 wireless networks. One GATEWAY unit is a single group, can connect up to 24 groups.
- Support Smartphone Application
- Please refer to wireless information table on the label of the product.

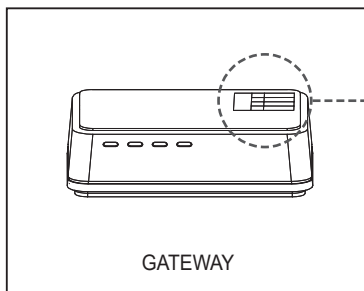

<GATEWAY wireless information table>

| | | |
|----------------|-------------|----------------------|
| GATEWAY | NAME | GW768 |
| | MAC ADDR. | 0.35.183.XXX.XXX.XXX |
| | GROUP ID | 1 |
| | CHANNEL | 11 |
| | PAN ID | 01 |

• GATEWAY Wireless information table reference










| | | |
|---------|-----------|--|
| GATEWAY | NAME | Model name |
| | MAC ADDR. | <ul style="list-style-type: none"> • MAC ADDRESS designated by manufacturer. • MAC ADDRESS is used to set IP address and network information by searching GATEWAY in the network. |
| | GROUP ID | <ul style="list-style-type: none"> • Designated GROUP ID by customer. Possible to set 1 to 24 GROUPS. • GROUP ID must NOT be same as USB DONGLE. • It must be set as same as ROUTER(Wireless Signaling Device). |
| | CHANNEL | <ul style="list-style-type: none"> • Can select up-to 16 channels from 11 to 26. It must be configured same as ROUTER(Wireless Signaling Device). |
| | PAN ID | <ul style="list-style-type: none"> • Pan ID can be set from 0 to 65535. It is wireless network identifier as an unique customer's number and designated by manufacturer. |

Information of wireless system

4. Installation of PC Application

(1) SERIAL TO USB DRIVER installation

- There are two options of receiving & controlling the wireless signaling device such as USB DONGLE and USB interface with the GATEWAY. In both cases, 'USB to serial device driver' should be installed (download it from Qlight website or <http://blog.qlight.com>).
- Select x64 or x86 EXE. file depending on your OS type.
- Silicon Labs' drivers are provided as a device driver.

| | | | |
|--|------------|-------|---------|
|  x64 | 2020-03-10 | 11:25 | |
|  x86 | 2020-03-10 | 11:25 | |
|  CP210xVCPInstaller_x64 | 2017-09-28 | 2:58 | 1,026KB |
|  CP210xVCPInstaller_x86 | 2017-09-28 | 2:58 | 903KB |
|  dpinst | 2017-09-28 | 2:45 | 12KB |
|  SLAB_License_Agreement_VCP_Windows | 2017-09-28 | 2:46 | 9KB |
|  slabvcp | 2017-10-11 | 2:52 | 11KB |
|  slabvcp | 2017-10-11 | 2:52 | 15KB |
|  v6-7-5-driver-release-notes | 2017-10-17 | 7:49 | 14KB |

- After the installation completes, check if COM# Port is displayed in the Device Manager of PC before connecting the USB DONGLE or the GATEWAY through a USB PORT.
- COM# can vary depending on the PC environment.



(2) Installation of PC Application

- The PC application is used to monitor, set, and control the status information of a wireless signaling device.
- In case of using C# Library, please refer to the Library User Manual which is provided separately.
- Please download the PC Application from our website and install it.




 QlightManagerv2.48 <= Please run .exe file. Software VERSION may be upgraded without notice.

**For the installation instruction and usage, please refer to manual.

(3) For the usage of API using DLL, please refer to manual.

Product Specifications

• QTG60L-WIZ




| Model number | Layer count | Voltage | Certificate | Weight | Color |
|--|-------------|----------------------|---|------------------|--|
| QTG60L-WIZ Steady QTG60L-WIZ-BZ Steady w/ built-in buzzer | 1 | DC24V AC110V-220V |    | 0.50kg 0.53kg | R-Red |
| QTG60LF-WIZ Steady/Flashing QTG60LF-WIZ-BZ Steady/Flashing w/ built-in buzzer | 2 | DC24V AC110V-220V | | 0.55kg 0.58kg | R-Red G-Green |
| QTGA60L-WIZ Steady QTGA60L-WIZ-BZ Steady w/ built-in buzzer | 3 | DC24V AC110V-220V | | 0.60kg 0.63kg | R-Red A-Amber G-Green |
| QTGA60LF-WIZ Steady/Flashing QTGA60LF-WIZ-BZ Steady/Flashing w/ built-in buzzer | 4 | DC24V AC110V-220V | | 0.65kg 0.68kg | R-Red A-Amber G-Green B-Blue |
| | 5 | DC24V AC110V-220V | | 0.70kg 0.73kg | R-Red A-Amber G-Green B-Blue W-White |

※ AC type model has a free-voltage range of 100V-240V

※ KC Certification: DC24V




| Light source/buzzer current(based on 1 layer) | | |
|---|-------|------------|
| Voltage condition | DC24V | AC110-220V |
| Light source current (1 layer) | 85mA | Max.65mA |
| Buzzer current | 30mA | Max.40mA |

• QTG60ML-WIZ

| Model number | Layer count | Voltage | Certificate | Weight | Color |
|--|-------------|----------------------|---|------------------|--|
| QTG60ML-WIZ Steady QTG60ML-WIZ-BZ Steady w/ built-in buzzer | 1 | DC24V AC110V-220V |    | 0.32kg 0.36kg | R-Red |
| QTG60MLF-WIZ Steady/Flashing QTG60MLF-WIZ-BZ Steady/Flashing w/ built-in buzzer | 2 | DC24V AC110V-220V | | 0.37kg 0.41kg | R-Red G-Green |
| QTGA60ML-WIZ Steady QTGA60ML-WIZ-BZ Steady w/ built-in buzzer | 3 | DC24V AC110V-220V | | 0.42kg 0.46kg | R-Red A-Amber G-Green |
| QTGA60MLF-WIZ Steady/Flashing QTGA60MLF-WIZ-BZ Steady/Flashing w/ built-in buzzer | 4 | DC24V AC110V-220V | | 0.47kg 0.51kg | R-Red A-Amber G-Green B-Blue |
| | 5 | DC24V AC110V-220V | | 0.52kg 0.56kg | R-Red A-Amber G-Green B-Blue W-White |

| Light source/buzzer current(based on 1 layer) | | |
|---|-------|------------|
| Voltage condition | DC24V | AC110-220V |
| Light source current (1 layer) | 85mA | Max.65mA |
| Buzzer current | 30mA | Max.40mA |

• QTG70L-WIZ




| Model number | Layer count | Voltage | Certificate | Weight | Color |
|--|-------------|----------------------|---|------------------|--|
| QTG70L-WIZ Steady QTG70L-WIZ-BZ Steady w/ built-in buzzer | 1 | DC24V AC110V-220V |    | 0.60kg 0.63kg | R-Red |
| QTG70LF-WIZ Steady/Flashing QTG70LF-WIZ-BZ Steady/Flashing w/ built-in buzzer | 2 | DC24V AC110V-220V | | 0.66kg 0.69kg | R-Red G-Green |
| QTGA70L-WIZ Steady QTGA70L-WIZ-BZ Steady w/ built-in buzzer | 3 | DC24V AC110V-220V | | 0.72kg 0.75kg | R-Red A-Amber G-Green |
| QTGA70LF-WIZ Steady/Flashing QTGA70LF-WIZ-BZ Steady/Flashing w/ built-in buzzer | 4 | DC24V AC110V-220V | | 0.78kg 0.81kg | R-Red A-Amber G-Green B-Blue |
| | 5 | DC24V AC110V-220V | | 0.84kg 0.87kg | R-Red A-Amber G-Green B-Blue W-White |

※ AC type model has a free-voltage range of 100V-240V

※ KC Certification: DC24V

| Light source/buzzer current(based on 1 layer) | | |
|---|-------|------------|
| Voltage condition | DC24V | AC110-220V |
| Light source current (1 layer) | 85mA | Max.65mA |
| Buzzer current | 30mA | Max.40mA |

• QTG70ML-WIZ

| Model number | Layer count | Voltage | Certificate | Weight | Color |
|--|-------------|----------------------|---|------------------|--|
| QTG70ML-WIZ Steady QTG70ML-WIZ-BZ Steady w/ built-in buzzer | 1 | DC24V AC110V-220V |    | 0.38kg 0.41kg | R-Red |
| QTG70MLF-WIZ Steady/Flashing QTG70MLF-WIZ-BZ Steady/Flashing w/ built-in buzzer | 2 | DC24V AC110V-220V | | 0.44kg 0.47kg | R-Red G-Green |
| QTGA70ML-WIZ Steady QTGA70ML-WIZ-BZ Steady w/ built-in buzzer | 3 | DC24V AC110V-220V | | 0.50kg 0.53kg | R-Red A-Amber G-Green |
| QTGA70MLF-WIZ Steady/Flashing QTGA70MLF-WIZ-BZ Steady/Flashing w/ built-in buzzer | 4 | DC24V AC110V-220V | | 0.56kg 0.59kg | R-Red A-Amber G-Green B-Blue |
| | 5 | DC24V AC110V-220V | | 0.62kg 0.65kg | R-Red A-Amber G-Green B-Blue W-White |

| Light source/buzzer current(based on 1 layer) | | |
|---|-------|------------|
| Voltage condition | DC24V | AC110-220V |
| Light source current (1 layer) | 85mA | Max.65mA |
| Buzzer current | 30mA | Max.40mA |



• QTG60ML-WIZ / QTG60L-WIZ

QTG60ML-WIZ : AC/DC
 QTG60MLF-WIZ : AC/DC

QTG60ML-WIZ-BZ : AC/DC
 QTG60MLF-WIZ-BZ : AC/DC

QTG60L-WIZ : AC/DC
 QTG60LF-WIZ : AC/DC

QTG60L-WIZ-BZ : AC/DC
 QTG60LF-WIZ-BZ : AC/DC

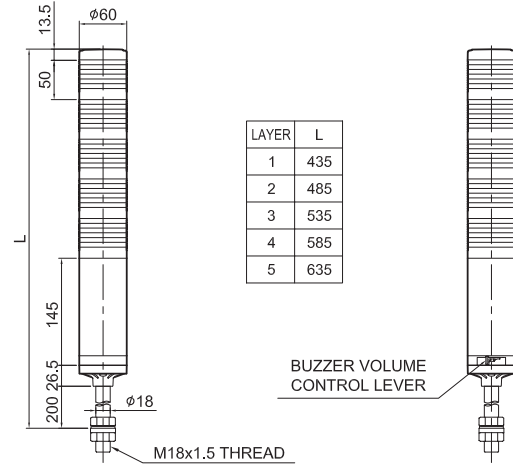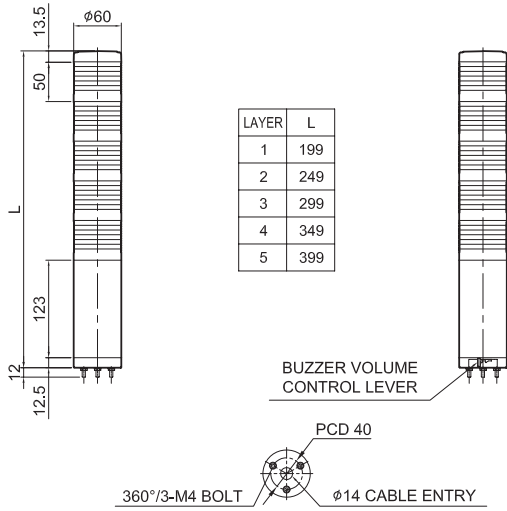



• QTG70ML-WIZ / QTG70L-WIZ

QTG70ML-WIZ : AC/DC
 QTG70MLF-WIZ : AC/DC

QTG70ML-WIZ-BZ : AC/DC
 QTG70MLF-WIZ-BZ : AC/DC


QTG70L-WIZ : AC/DC
 QTG70LF-WIZ : AC/DC

QTG70L-WIZ-BZ : AC/DC
 QTG70LF-WIZ-BZ : AC/DC

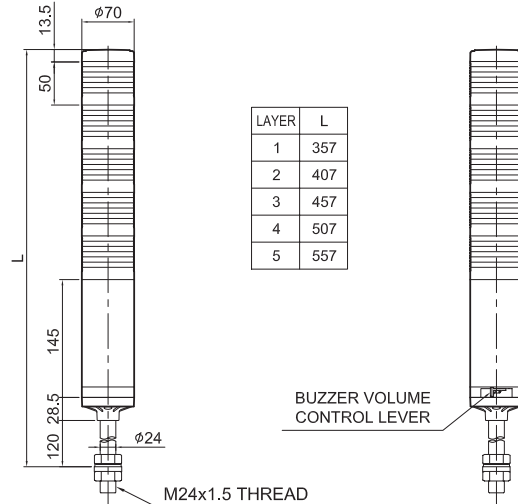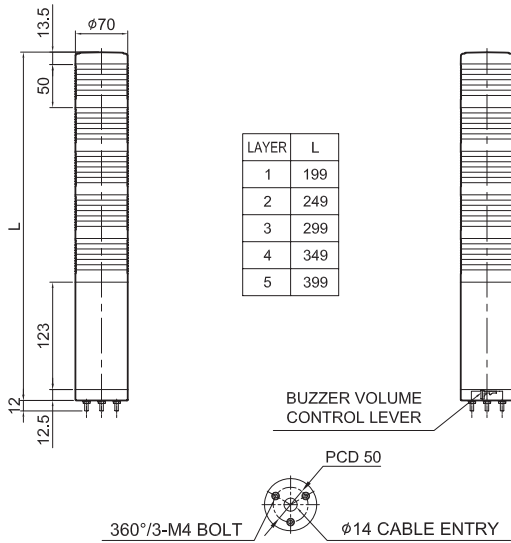


• GATEWAY

GATEWAY (GW768)

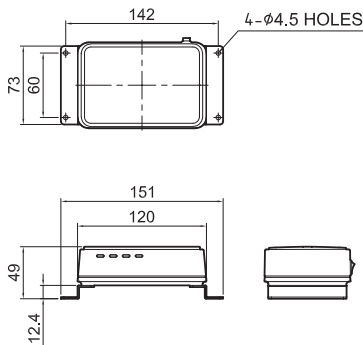

• USB DONGLE

USB DONGLE (WIZ32)

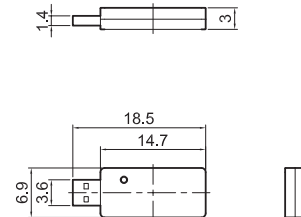

Wiring Instructions

- Please wire the product by referring below instruction.
- You can monitor status of tower light and control them via wireless network.


| | | Wiring using external contact | |
|--|---------------|-------------------------------|--|
| AC/DC Steady | Standard type | Buzzer type | |
| QTG60ML-WIZ QTG60L-WIZ QTG70ML-WIZ QTG70L-WIZ | | | |
| DC Steady/ Flashing | | | |
| AC Steady/ Flashing | | | |

Wiring Instructions


• Wiring to transistor, use the NPN transistor. Please wire properly based on wiring instructions below.

| Wiring using transistor | | |
|--|---------------|-------------|
| AC/DC Steady | Standard type | Buzzer type |
| QTG60ML-WIZ QTG60L-WIZ QTG70ML-WIZ QTG70L-WIZ | | |
| DC Steady/ Flashing | | |
| AC Steady/ Flashing | | |

Parts Definition

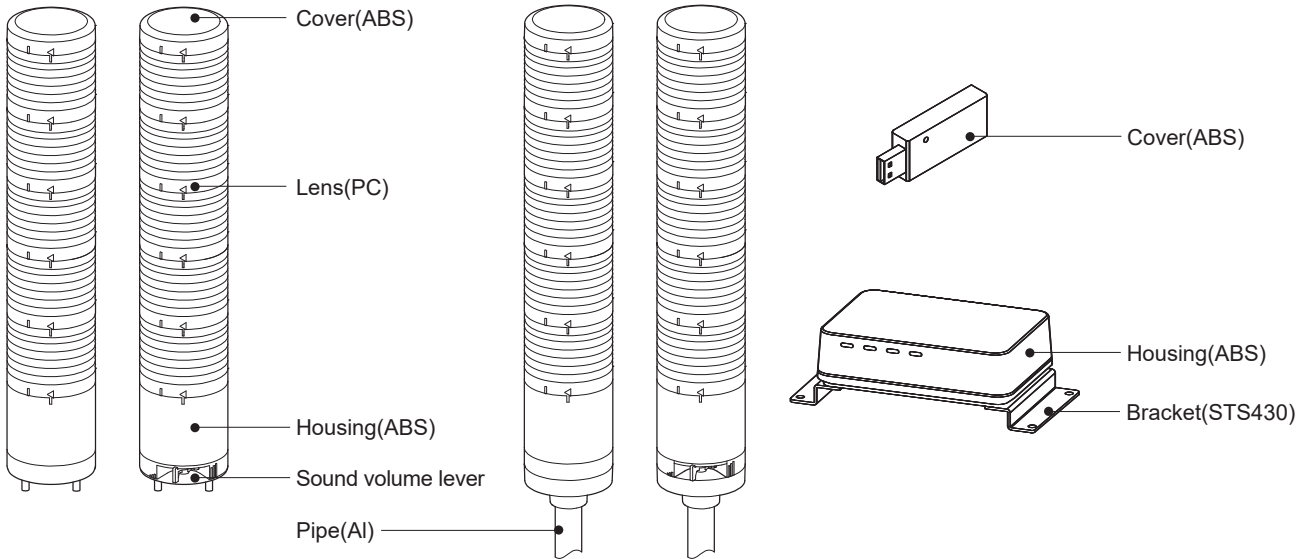


How to Change Lens Kit

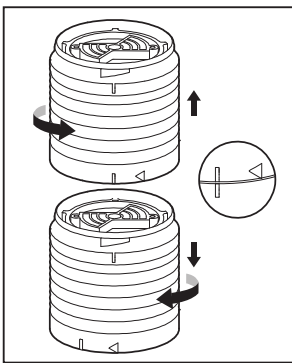


- Disassembling lens kits
- ① Twist the upper lens kit in a counter-wise direction so the "I" mark from both kits align.
 - ② Disassemble by removing the upper lens kit from the lower one.

※Cautions

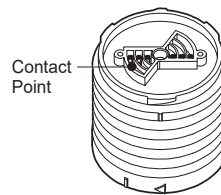

Lens modules are connected through cone-shaped contact point. In case the contact point is damaged, it may cause a contact failure.

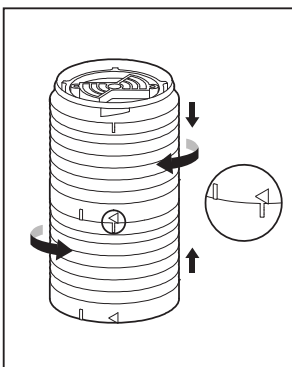


- Assembling lens kits
- ① Put the two lens kits together by aligning the upper lens' "I" mark and the lower lens' "I" mark together.
 - ② Lock the two kits by twisting the upper lens kit in a counter-wise direction so the upper lens' "◁" mark aligns with the lower lens' "I" mark.


Installation Environment and Protection Rating

- This product is designed for indoor use with protection rating of IP65(standard type) and IP54(buzzer type).
- If the product is installed in locations that subject it to excessive dust or water other than the designated IP protection rating indicated(IP65), it may cause malfunction or damage to the product.
- For further information, please visit our website(www.qlight.com).

Buzzer Sound Volume Adjustment Instructions

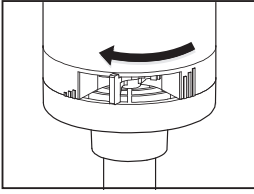

Buzzer volume is reduced by sliding the volume control lever to the left as show in the diagram to the left.
(Min. $65\pm 4\text{dB/m}$)

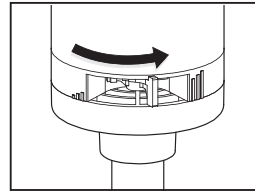


Raise/ Increase the buzzer volume by sliding the control lever to the right as shown in the diagram to the left.
(Max. $85\pm 4\text{dB/m}$)


Mounting Hole Specifications

■ QTG60ML-WIZ / QTG70ML-WIZ - Direct Mounting Type Model


① Machine holes on the mounting surface referring to the diagram below.

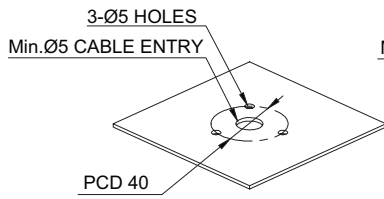

QTG60ML-WIZ

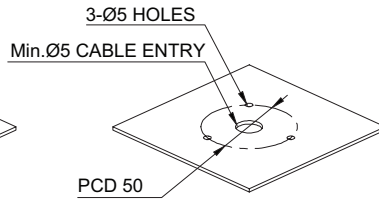

QTG70ML-WIZ

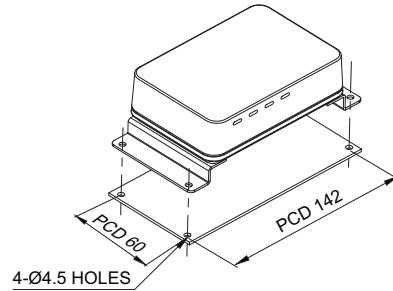

GW768

② Remove the flange nuts from bolts and place the product through the mounting surface holes.

③ Fasten the flange nuts on the opposite side of the mounting surface until the product is tightened securely.








Mounting Accessories (Sold Separately)

• Please refer to the dimensions below for installation of mounting brackets.








■ QTG60ML-WIZ/ QTG70ML-WIZ - Direct Mounting Type Model


| | Dimensions | |
|--------------|--------------|--------------|
| QTG60 series | <p>TWS45</p> | <p>TWA45</p> |
| QTG70 series | <p>TWS80</p> | <p>TWA80</p> |

■ QTG60L-WIZ - Pole Mounting Type Model
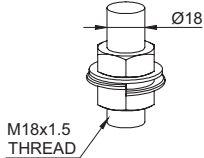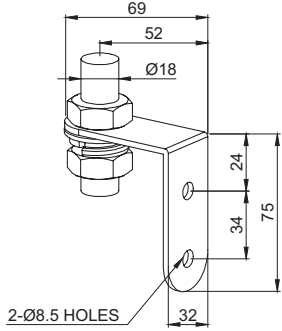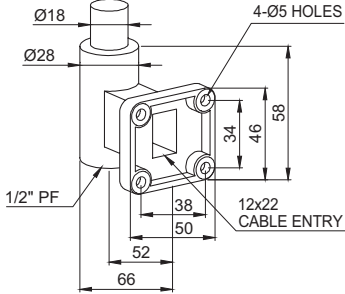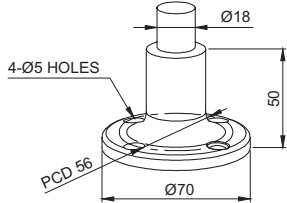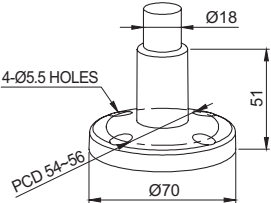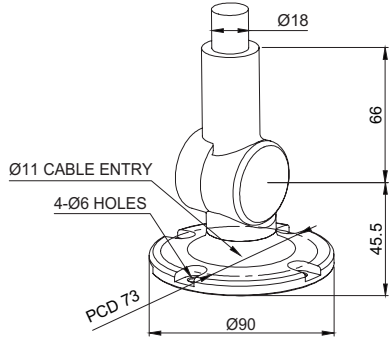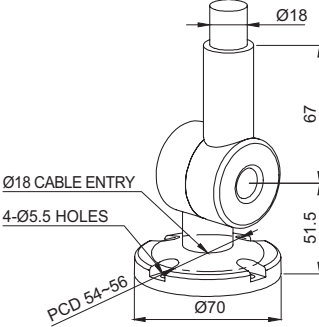
| Dimensions | |
|---|---|
| <p>QTG60 series</p>  <p>M18x1.5 THREAD</p> <p>Ø18</p> |  <p>69 52 Ø18 24 34 75 2-Ø8.5 HOLES 32</p> |
| <p>18mm SCREW & NUT</p> | <p>LB18</p> |
|  <p>Ø18 Ø28 4-Ø5 HOLES 1/2" PF 12x22 CABLE ENTRY 34 46 58 38 50 52 66</p> |  <p>Ø18 4-Ø5 HOLES PCD 56 Ø70 50</p> |
| <p>LW18</p> | <p>SZ18</p> |
|  <p>Ø18 4-Ø5.5 HOLES PCD 54-56 Ø70 51</p> |  <p>Ø18 Ø11 CABLE ENTRY 4-Ø6 HOLES PCD 73 Ø90 45.5 66</p> |
| <p>QZ18</p> | <p>SL18</p> |
|  <p>Ø18 Ø18 CABLE ENTRY 4-Ø5.5 HOLES PCD 54-56 Ø70 51.5 67</p> | |
| <p>QL18</p> | |

■ QTG70L-WIZ - Pole Mounting Type Model
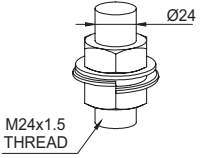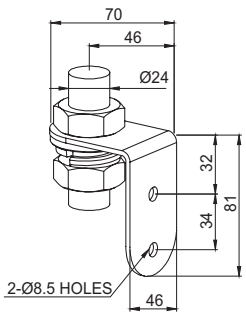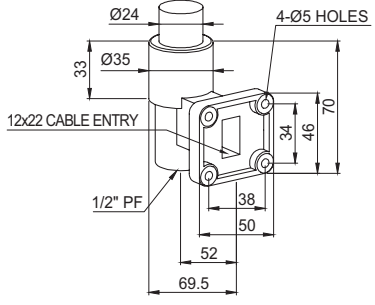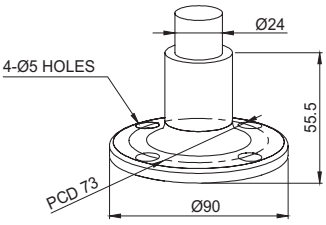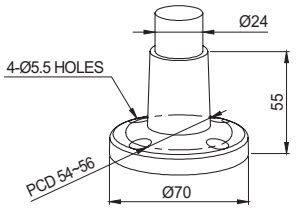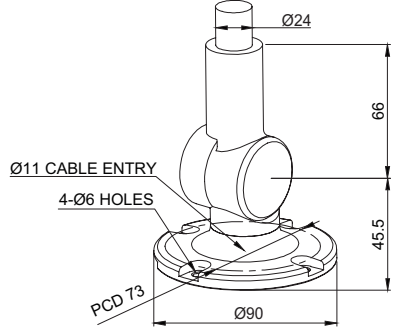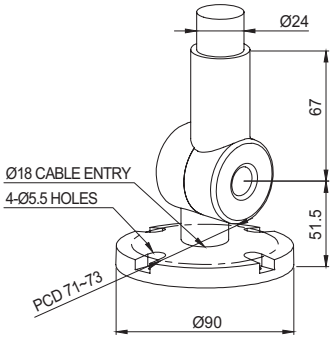
| Dimensions | |
|---------------------|---|
| <p>QTG70 series</p> |  <p style="text-align: center;">24mm SCREW & NUT</p> |
| |  <p style="text-align: center;">LB24</p> |
| |  <p style="text-align: center;">LW24</p> |
| |  <p style="text-align: center;">SZ24</p> |
| |  <p style="text-align: center;">QZ24</p> |
| |  <p style="text-align: center;">SL24</p> |
| |  <p style="text-align: center;">QL24</p> |

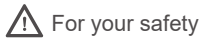

For your safety

Specification and dimensions listed in this catalogue subject to change without notice for product quality improvement.
The newest product information is available on our website.(www.qlight.com)
Please read the instruction manual attached to the product carefully before installation and use.

Korea Corporation Qlight Co., Ltd. www.qlight.com | trade@qlight.com

Head Office | Suite #1510, STX-V Tower, 128 Gasan Digital 1-ro, Geumcheon-gu, Seoul, 08507, South Korea

Tel: +82-2-2679-6152 Fax: +82-2-2679-6154

Factory(Gimhae Production Headquarters) | 185-25, Mukbang-ro, Sangdong-myeon, Gimhae-si, Gyeongsangnam-do, 50805, South Korea

Tel: +82-55-328-1111

Overseas Sales Department | Qlight Building, 704 Nakdong-daero, Sasang-gu, Busan 47044, South Korea Tel: +82-51-620-4100

Busan Business Center | Qlight Building, 704 Nakdong-daero, Sasang-gu, Busan 47044, South Korea Tel: +82-51-245-0017

China Corporation SHANGHAI Qlight Electronic Co., Ltd. www.qlight.com www.qlightcn.com | qlightcn@qlight.com

Sales Corporation (Shanghai) | Room 333 Building B, No.11, Lane 450, Zhenda Road, Baoshan District, Shanghai, China

Tel: +86-21-6651-7100 Fax: +86-21-6315-3929

Manufacturing Corporation (Qidong) | No.33, Haiyan Road, Qidong High-tech Industrial Development Zone, Qidong, Jiangsu Province, China

Tel: +86-513-8384-9999 Fax: +86-513-8384-9910

Qlightec

Innovation in Alarm & Signal

Product Operation Inquiry / Customer Support +82-51-620-4100

You can expect prompt service if you have exact information such as model name, symptom, telephone number and address.

※ ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE.

Head office : Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea (Postal Code : 08507)

Factory : 185-25, Mukbang-Ro, Sangdong-Myeon, Gimhae-Si, Gyeongsangnam-Do, Korea (Postal Code : 50805)

www.qlight.com

EN - QTG60ML-WIZ - 2604A