


Modular LED Signal Tower Lights

QTG50/ QTG60/ QTG70

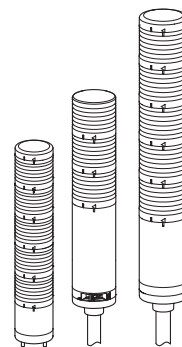

Thank you for purchasing Qlight's products. Please read this user manual carefully prior to installation and operation to ensure safe and correct use.

⚠ Precautions for Safety

Failure to follow the instructions below may cause a loss of life or serious physical injury.

1. During wiring or maintenance, please completely turn off the power of the product. (Failure to follow this may lead to an electric shock.)
2. Do not install the product in locations that subjects it to excessive dust or water other than the conditions designated by the IP protection ratings indicated for each product. (Failure to follow these instructions may cause a fire to the product, electric shock, physical injury, malfunction or damage to the product.)
3. Do not alter or repair this product. If maintenance or repair service is required, please contact your local Qlight contact point. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
4. Please apply the correct voltage to the product. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
5. When the product is applied to a condition that may impact lives or property, please make sure to have a double safety device. (Failure to follow this may cause damage to property, fire, electric shock and loss of life.)

⚠ Precautions for Correct Use

Failure to follow the proper instructions may cause damage to property, the product, or malfunction of the product that would void the warranty.

1. Please remove any objects that can interrupt ventilation around the product.
2. Please turn off the power of the product immediately if it fails to operate properly.
3. Carefully wire the product according to each product's specification.
4. Please be careful in preventing chemicals such as thinner, benzene, etc. in contact with the surface of the product.
5. Do not apply excessive force/impact to the product.
6. Failure to follow any of the instructions above may cause malfunction or damage to the product, fire, and electric shock.

Ordering Specifications

QTG50/ 60/ 70L	3	110/220	RAG	LW18/24
[Model number]	[Layer count]	[Voltage]	[Color]	[Bracket]
• QTG50/ 60/ 70L	• 1 Layer	• 12-DC12V	R-Red	• None-Standard
• QTG50/ 60/ 70L-BZ	• 2 Layers	• 24-DC24V	A-Amber	• Bracket
• QTG50/ 60/ 70LF	• 3 Layers	• 110/220	G-Green	- LB18/24 - LW18/24
• QTG50/ 60/ 70LF-BZ	• 4 Layers	-AC110V-220V	B-Blue	- QZ18/24 - SZ18/24
• QTGA50/ 60/ 70L	• 5 Layers		W-White	- QL18/24 - SL18/24
• QTGA50/ 60/ 70L-BZ				
• QTGA50/ 60/ 70LF				
• QTGA50/ 60/ 70LF-BZ				

QTG50/ 60/ 70ML	3	110/220	RAG
[Model number]	[Layer count]	[Voltage]	[Color]
• QTG50/ 60/ 70ML	• 1 Layer	• 12-DC12V	R-Red
• QTG50/ 60/ 70ML-BZ	• 2 Layers	• 24-DC24V	A-Amber
• QTG50/ 60/ 70MLF	• 3 Layers	• 110/220-AC110V-220V	G-Green
• QTG50/ 60/ 70MLF-BZ	• 4 Layers		B-Blue
• QTGA50/ 60/ 70ML	• 5 Layers		W-White
• QTGA50/ 60/ 70ML-BZ			
• QTGA50/ 60/ 70MLF			
• QTGA50/ 60/ 70MLF-BZ			





Please scan the QR code for more detailed product information.

www.qlight.com



Product Specifications

• QTG50L

Model number	Layer count	Voltage	Certificate	Weight	Color
QTG50L Steady	1	DC12V DC24V AC110V-220V	 	0.34kg 0.34kg 0.44kg	R-Red
QTG50L-BZ Steady w/ built-in buzzer					
QTG50LF Steady/Flashing	2	DC12V DC24V AC110V-220V		0.43kg 0.43kg 0.53kg	R-Red G-Green
QTG50LF-BZ Steady/Flashing w/ built-in buzzer					
QTGA50L Steady	3	DC12V DC24V AC110V-220V		0.51kg 0.51kg 0.61kg	R-Red A-Amber G-Green
QTGA50L-BZ Steady w/ built-in buzzer					
QTGA50LF Steady/Flashing	4	DC12V DC24V AC110V-220V		0.60kg 0.60kg 0.70kg	R-Red A-Amber G-Green B-Blue
QTGA50LF-BZ Steady/Flashing w/ built-in buzzer					
	5	DC12V DC24V AC110V-220V		0.68kg 0.68kg 0.78kg	R-Red A-Amber G-Green B-Blue W-White



Light source/buzzer current(based on 1 layer)			
Voltage condition	DC12V	DC24V	AC110-220V
Light source current (1 layer)	0.090A	0.070A	Max.0.055A
Buzzer current	0.040A	0.075A	Max.0.055A

• QTG60L

Model number	Layer count	Voltage	Certificate	Weight	Color
QTG60L Steady	1	DC12V DC24V AC110V-220V	 	0.26kg 0.26kg 0.36kg	R-Red
QTG60L-BZ Steady w/ built-in buzzer					
QTG60LF Steady/Flashing	2	DC12V DC24V AC110V-220V		0.34kg 0.34kg 0.44kg	R-Red G-Green
QTG60LF-BZ Steady/Flashing w/ built-in buzzer					
QTGA60L Steady	3	DC12V DC24V AC110V-220V		0.43kg 0.43kg 0.53kg	R-Red A-Amber G-Green
QTGA60L-BZ Steady w/ built-in buzzer					
QTGA60LF Steady/Flashing	4	DC12V DC24V AC110V-220V		0.51kg 0.51kg 0.61kg	R-Red A-Amber G-Green B-Blue
QTGA60LF-BZ Steady/Flashing w/ built-in buzzer					
	5	DC12V DC24V AC110V-220V		0.59kg 0.59kg 0.69kg	R-Red A-Amber G-Green B-Blue W-White

Light source/buzzer current(based on 1 layer)			
Voltage condition	DC12V	DC24V	AC110-220V
Light source current (1 layer)	0.105A	0.070A	Max.0.060A
Buzzer current	0.040A	0.075A	Max.0.055A



• QTG70L

Model number	Layer count	Voltage	Certificate	Weight	Color
QTG70L Steady	1	DC12V DC24V AC110V-220V	 	0.42kg 0.42kg 0.52kg	R-Red
QTG70L-BZ Steady w/ built-in buzzer					
QTG70LF Steady/Flashing	2	DC12V DC24V AC110V-220V		0.56kg 0.56kg 0.66kg	R-Red G-Green
QTG70LF-BZ Steady/Flashing w/ built-in buzzer					
QTGA70L Steady	3	DC12V DC24V AC110V-220V		0.77kg 0.77kg 0.87kg	R-Red A-Amber G-Green
QTGA70L-BZ Steady w/ built-in buzzer					
QTGA70LF Steady/Flashing	4	DC12V DC24V AC110V-220V		0.92kg 0.92kg 1.02kg	R-Red A-Amber G-Green B-Blue
QTGA70LF-BZ Steady/Flashing w/ built-in buzzer					
	5	DC12V DC24V AC110V-220V		1.07kg 1.07kg 1.17kg	R-Red A-Amber G-Green B-Blue W-White

Light source/buzzer current(based on 1 layer)			
Voltage condition	DC12V	DC24V	AC110-220V
Light source current (1 layer)	0.105A	0.070A	Max.0.060A
Buzzer current	0.040A	0.075A	Max.0.055A



※ QTG series UL listed : DC24V

• QTG50ML

Model number	Layer count	Voltage	Certificate	Weight	Color
QTG50ML Steady	1	DC12V DC24V AC110V-220V	 	0.19kg 0.19kg 0.29kg	R-Red
QTG50ML-BZ Steady w/ built-in buzzer					
QTG50MLF Steady/Flashing	2	DC12V DC24V AC110V-220V		0.27kg 0.27kg 0.37kg	R-Red G-Green
QTG50MLF-BZ Steady/Flashing w/ built-in buzzer					
QTGA50ML Steady	3	DC12V DC24V AC110V-220V		0.36kg 0.36kg 0.46kg	R-Red A-Amber G-Green
QTGA50ML-BZ Steady w/ built-in buzzer					
QTGA50MLF Steady/Flashing	4	DC12V DC24V AC110V-220V		0.44kg 0.44kg 0.54kg	R-Red A-Amber G-Green B-Blue
QTGA50MLF-BZ Steady/Flashing w/ built-in buzzer					
QTGA50MLF Steady/Flashing	5	DC12V DC24V AC110V-220V		0.53kg 0.53kg 0.63kg	R-Red A-Amber G-Green B-Blue W-White
QTGA50MLF-BZ Steady/Flashing w/ built-in buzzer					



Light source/buzzer current(based on 1 layer)			
Voltage condition	DC12V	DC24V	AC110-220V
Light source current (1 layer)	0.090A	0.070A	Max.0.055A
Buzzer current	0.040A	0.075A	Max.0.055A

• QTG60ML

Model number	Layer count	Voltage	Certificate	Weight	Color
QTG60ML Steady	1	DC12V DC24V AC110V-220V	 	0.26kg 0.26kg 0.36kg	R-Red
QTG60ML-BZ Steady w/ built-in buzzer					
QTG60MLF Steady/Flashing	2	DC12V DC24V AC110V-220V		0.34kg 0.34kg 0.44kg	R-Red G-Green
QTG60MLF-BZ Steady/Flashing w/ built-in buzzer					
QTGA60ML Steady	3	DC12V DC24V AC110V-220V		0.43kg 0.43kg 0.53kg	R-Red A-Amber G-Green
QTGA60ML-BZ Steady w/ built-in buzzer					
QTGA60MLF Steady/Flashing	4	DC12V DC24V AC110V-220V		0.51kg 0.51kg 0.61kg	R-Red A-Amber G-Green B-Blue
QTGA60MLF-BZ Steady/Flashing w/ built-in buzzer					
QTGA60MLF Steady/Flashing	5	DC12V DC24V AC110V-220V		0.59kg 0.59kg 0.69kg	R-Red A-Amber G-Green B-Blue W-White
QTGA60MLF-BZ Steady/Flashing w/ built-in buzzer					

Light source/buzzer current(based on 1 layer)			
Voltage condition	DC12V	DC24V	AC110-220V
Light source current (1 layer)	0.105A	0.070A	Max.0.060A
Buzzer current	0.040A	0.075A	Max.0.055A

• QTG70ML

Model number	Layer count	Voltage	Certificate	Weight	Color
QTG70ML Steady	1	DC12V DC24V AC110V-220V	 	0.42kg 0.42kg 0.52kg	R-Red
QTG70ML-BZ Steady w/ built-in buzzer					
QTG70MLF Steady/Flashing	2	DC12V DC24V AC110V-220V		0.56kg 0.56kg 0.66kg	R-Red G-Green
QTG70MLF-BZ Steady/Flashing w/ built-in buzzer					
QTGA70ML Steady	3	DC12V DC24V AC110V-220V		0.77kg 0.77kg 0.87kg	R-Red A-Amber G-Green
QTGA70ML-BZ Steady w/ built-in buzzer					
QTGA70MLF Steady/Flashing	4	DC12V DC24V AC110V-220V		0.92kg 0.92kg 1.02kg	R-Red A-Amber G-Green B-Blue
QTGA70MLF-BZ Steady/Flashing w/ built-in buzzer					
QTGA70MLF Steady/Flashing	5	DC12V DC24V AC110V-220V		1.07kg 1.07kg 1.17kg	R-Red A-Amber G-Green B-Blue W-White
QTGA70MLF-BZ Steady/Flashing w/ built-in buzzer					


Light source/buzzer current(based on 1 layer)			
Voltage condition	DC12V	DC24V	AC110-220V
Light source current (1 layer)	0.105A	0.070A	Max.0.060A
Buzzer current	0.040A	0.075A	Max.0.055A

• QTG50(M)L

QTG50ML : DC
QTG50MLF : DC
QTG50ML-BZ : DC

QTG50ML : AC
QTG50MLF-BZ : DC


QTG50MLF : AC
QTG50ML-BZ : AC
QTG50MLF-BZ : AC

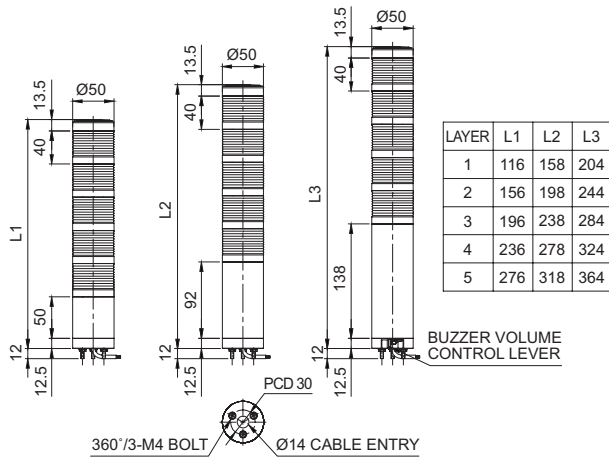

QTG50L : DC
QTG50LF : DC
QTG50L-BZ : DC

QTG50L : AC
QTG50LF-BZ : DC

QTG50LF : AC
QTG50L-BZ : AC
QTG50LF-BZ : AC

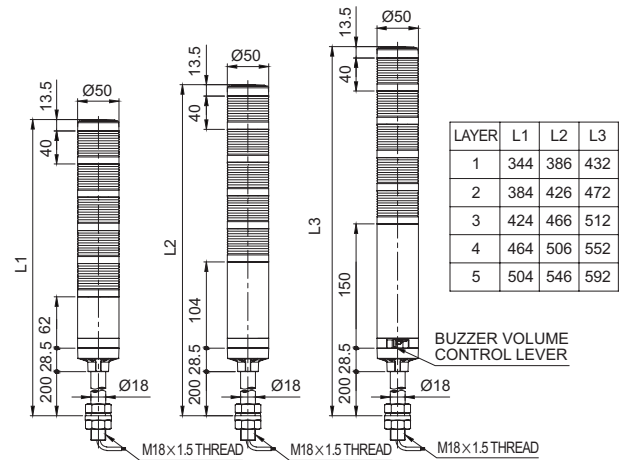


• QTG60(M)L

QTG60ML : DC
QTG60MLF : DC
QTG60ML-BZ : DC

QTG60ML : AC
QTG60MLF-BZ : DC


QTG60MLF : AC
QTG60ML-BZ : AC
QTG60MLF-BZ : AC

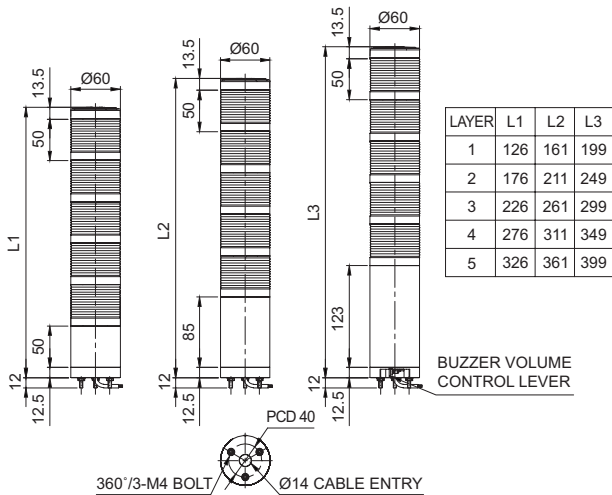

QTG60L : DC
QTG60LF : DC
QTG60L-BZ : DC

QTG60L : AC
QTG60LF-BZ : DC

QTG60LF : AC
QTG60L-BZ : AC
QTG60LF-BZ : AC

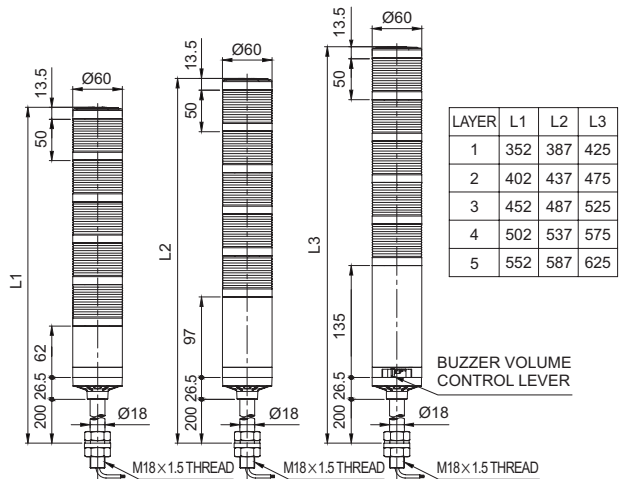

• QTG70(M)L

QTG70ML : DC
QTG70MLF : DC
QTG70ML-BZ : DC



QTG70ML : AC
QTG70MLF : AC
QTG70ML-BZ : AC

QTG70MLF-BZ : AC

QTG70L : DC
QTG70LF : DC
QTG70L-BZ : DC

QTG70L : AC
QTG70LF : AC
QTG70L-BZ : AC





QTG70LF-BZ : AC

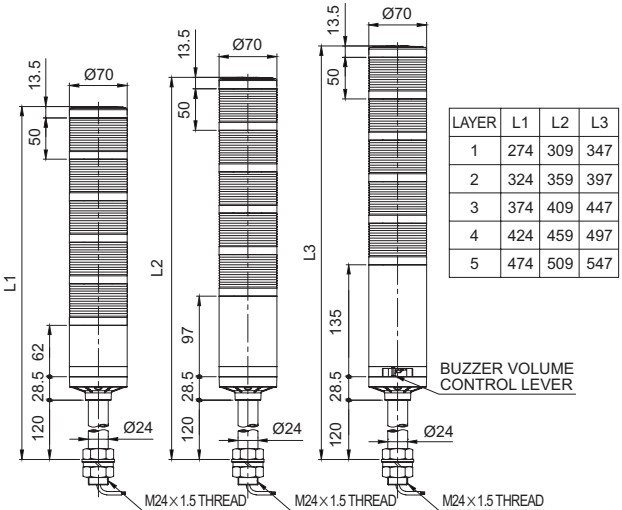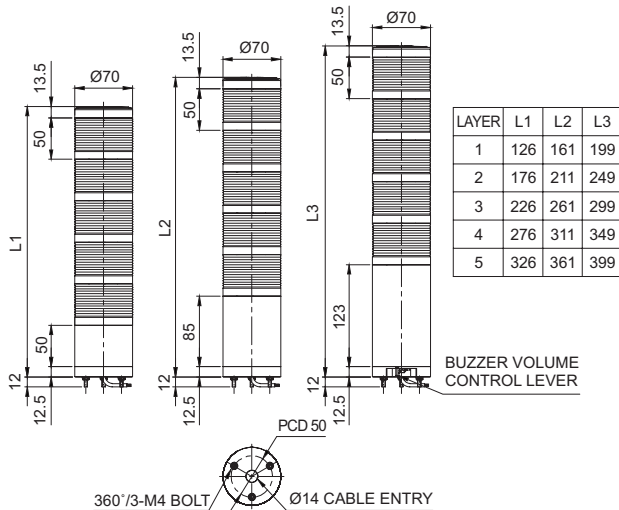

Wiring Instructions

■ Wiring using external contact

- In case of wiring with external contacts, refer to the wiring diagrams below according to your product's type and voltage setting.

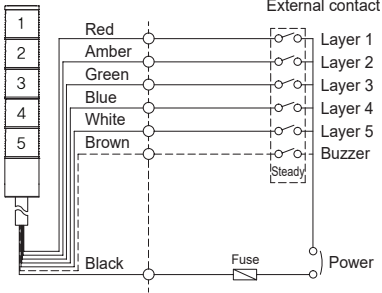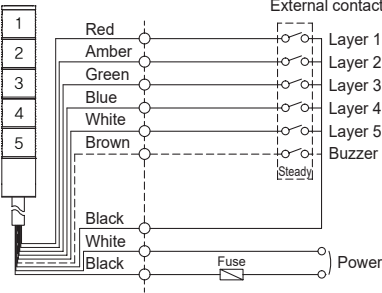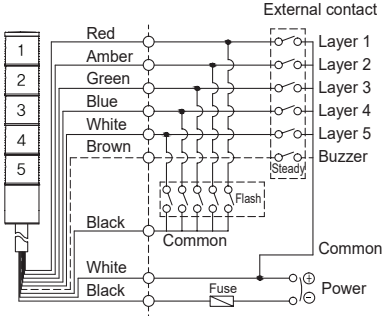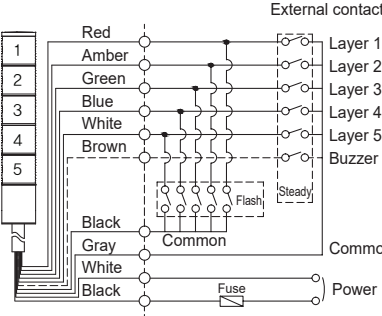	Wiring diagrams		Wiring diagrams
DC Steady	 <p>QTG50ML QTG50L QTG60ML QTG60L QTG70ML QTG70L</p> <ul style="list-style-type: none"> • QTG(A) □□ (M)L - Buzzer same wiring instruction • QTG□□ L <ul style="list-style-type: none"> └ Lens diameter 50(50mm) : QTG50(M)L 60(60mm) : QTG60(M)L 70(70mm) : QTG70(M)L 	AC Steady	 <p>QTG50ML QTG50L QTG60ML QTG60L QTG70ML QTG70L</p> <ul style="list-style-type: none"> • QTG(A) □□ (M)L - Buzzer same wiring instruction • QTG□□ L <ul style="list-style-type: none"> └ Lens diameter 50(50mm) : QTG50(M)L 60(60mm) : QTG60(M)L 70(70mm) : QTG70(M)L
DC Steady/Flashing	 <p>QTG50MLF QTG50LF QTG60MLF QTG60LF QTG70MLF QTG70LF</p> <ul style="list-style-type: none"> • QTG(A) □□ (M)LF - Buzzer same wiring instruction • QTG□□ LF <ul style="list-style-type: none"> └ Lens diameter 50(50mm) : QTG50(M)LF 60(60mm) : QTG60(M)LF 70(70mm) : QTG70(M)LF 	AC Steady/Flashing	 <p>QTG50MLF QTG50LF QTG60MLF QTG60LF QTG70MLF QTG70LF</p> <ul style="list-style-type: none"> • QTG(A) □□ (M)LF - Buzzer same wiring instruction • QTG□□ LF <ul style="list-style-type: none"> └ Lens diameter 50(50mm) : QTG50(M)LF 60(60mm) : QTG60(M)LF 70(70mm) : QTG70(M)LF

- DC steady type cable specification: External power/ signal line - UL1007 AWG22(0.3sq) 400mm
- AC steady, AC/DC steady/flashing type cable specification : External power line - UL1015 AWG18(0.75sq) × 2C 400mm
External signal line - UL1007 AWG22(0.3sq) 400mm


■ Wiring using transistor

- When using a transistor, please choose between the NPN or PNP type transistor which best matches the voltage and product type, then connect them correctly according to the wiring diagrams below.


Wiring diagrams	
DC Steady	<div style="display: flex; justify-content: space-around;"> <div style="width: 45%;"> <p style="text-align: center;">External transistor-NPN</p> <p style="text-align: center;">External transistor-PNP</p> </div> <div style="width: 45%;"> <p>QTG50ML QTG50L QTG60ML QTG60L QTG70ML QTG70L</p> <ul style="list-style-type: none"> • QTG(A) □□(M)L - Buzzer same wiring instruction • QTG □□ L <ul style="list-style-type: none"> □ Lens diameter 50(50mm) : QTG50(M)L 60(60mm) : QTG60(M)L 70(70mm) : QTG70(M)L </div> </div>
DC Steady/Flashing	<div style="display: flex; justify-content: space-around;"> <div style="width: 45%;"> <p style="text-align: center;">External transistor-PNP</p> <p>QTG50MLF QTG50LF QTG60MLF QTG60LF QTG70MLF QTG70LF</p> <ul style="list-style-type: none"> • QTG(A) □□(M)LF - Buzzer same wiring instruction • QTG □□ LF <ul style="list-style-type: none"> □ Lens diameter 50(50mm) : QTG50(M)LF 60(60mm) : QTG60(M)LF 70(70mm) : QTG70(M)LF </div> <div style="width: 45%;"> <p style="text-align: center;">External transistor-PNP</p> <p>QTG50MLF QTG50LF QTG60MLF QTG60LF QTG70MLF QTG70LF</p> <ul style="list-style-type: none"> • QTG(A) □□(M)LF - Buzzer same wiring instruction • QTG □□ LF <ul style="list-style-type: none"> □ Lens diameter 50(50mm) : QTG50(M)LF 60(60mm) : QTG60(M)LF 70(70mm) : QTG70(M)LF </div> </div>

- DC steady type cable specification: External power/ signal line - UL1007 AWG22(0.3sq) 400mm
- AC steady, AC/DC steady/flashing type cable specification : External power line - UL1015 AWG18(0.75sq) × 2C 400mm
External signal line - UL1007 AWG22(0.3sq) 400mm

Parts Definition

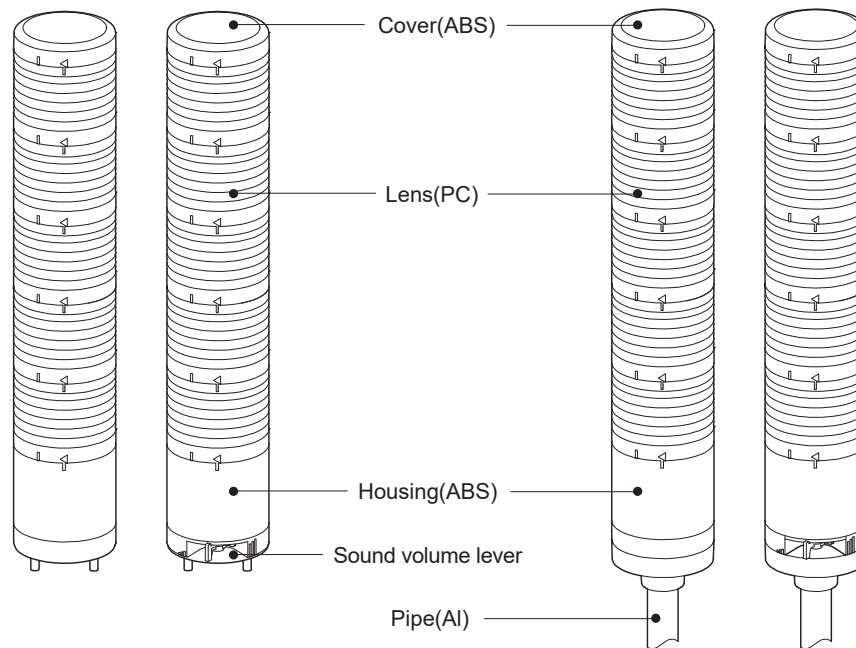


How to Change Lens Kit

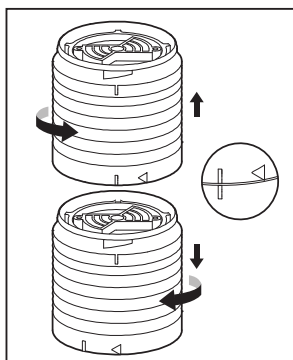


• Disassembling lens kits

- ① Twist the upper lens kit in a counter-wise direction so the "I" mark from both kits align.
- ② Disassemble by removing the upper lens kit from the lower one.

※Cautions

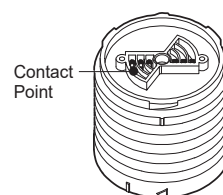

Lens modules are connected through cone-shaped contact point. In case the contact point is damaged, it may cause a contact failure.

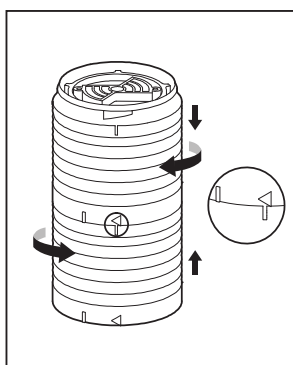


• Assembling lens kits

- ① Put the two lens kits together by aligning the upper lens' "I" mark and the lower lens' "I" mark together.
- ② Lock the two kits by twisting the upper lens kit in a counter-wise direction so the upper lens' "◁" mark aligns with the lower lens' "I" mark.


Installation Environment and Protection Rating

- This product is designed for indoor use with protection rating of IP65(standard type) and IP54(buzzer type).
- If the product is installed in locations that subject it to excessive dust or water other than the designated IP protection rating indicated(IP65), it may cause malfunction or damage to the product.
- For further information, please visit our website(www.qlight.com).

Buzzer Sound Volume Adjustment Instructions

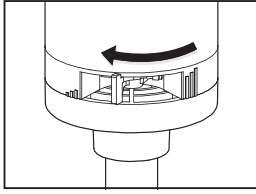

Buzzer volume is reduced by sliding the volume control lever to the left as show in the diagram to the left.
(Min. $65\pm 4\text{dB/m}$)

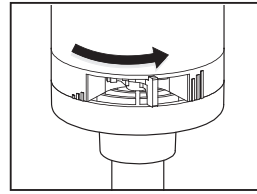


Raise/ Increase the buzzer volume by sliding the control lever to the right as shown in the diagram to the left.
(Max. $85\pm 4\text{dB/m}$)


Mounting Hole Specifications

■ QTG50M/ QTG60M/ QTG70M -Direct Mounting Type Model


① Machine holes on the mounting surface referring to the diagram below.

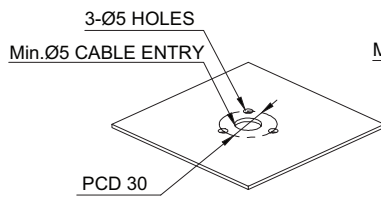

QTG50M

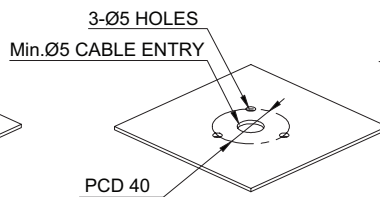

QTG60M

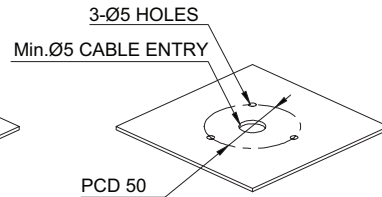

QTG70M

② Remove the flange nuts from bolts and place the product through the mounting surface holes.

③ Fasten the flange nuts on the opposite side of the mounting surface until the product is tightened securely.








Mounting Accessories (Sold Separately)

• Please refer to the dimensions below for installation of mounting brackets.








■ QTG50ML/ QTG60ML/ QTG70ML - Direct Mounting Type Model

	Dimensions	
QTG50 series QTG60 series	<p>TWS45</p>	<p>TWA45</p>
QTG70 series	<p>TWS80</p>	<p>TWA80</p>

■ QTG50L/ QTG60L - Pole Mounting Type Model

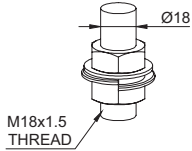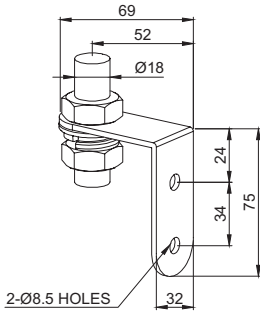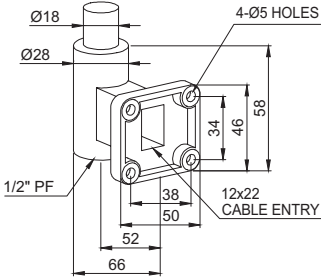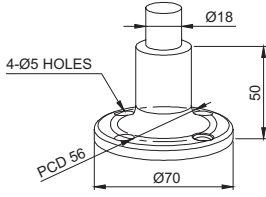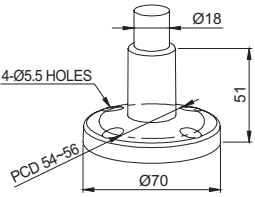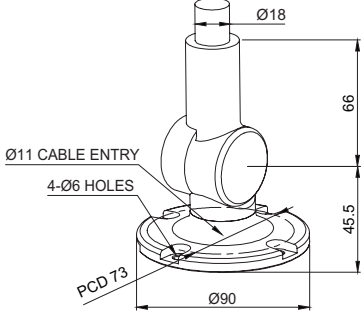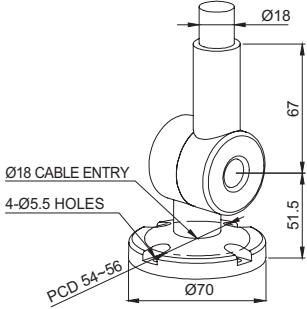Dimensions		
QTG50 series QTG60 series	 <p>Ø18</p> <p>M18x1.5 THREAD</p> <p>18mm SCREW & NUT</p>	 <p>69</p> <p>52</p> <p>Ø18</p> <p>24</p> <p>34</p> <p>75</p> <p>32</p> <p>2-Ø8.5 HOLES</p> <p>LB18</p>
	 <p>Ø18</p> <p>Ø28</p> <p>4-Ø5 HOLES</p> <p>1/2" PF</p> <p>12x22 CABLE ENTRY</p> <p>34</p> <p>46</p> <p>58</p> <p>38</p> <p>50</p> <p>52</p> <p>66</p> <p>LW18</p>	 <p>Ø18</p> <p>4-Ø5 HOLES</p> <p>PCD 56</p> <p>Ø70</p> <p>50</p> <p>SZ18</p>
	 <p>Ø18</p> <p>4-Ø5.5 HOLES</p> <p>PCD 54-56</p> <p>Ø70</p> <p>51</p> <p>QZ18</p>	 <p>Ø18</p> <p>66</p> <p>Ø11 CABLE ENTRY</p> <p>4-Ø6 HOLES</p> <p>PCD 73</p> <p>Ø90</p> <p>45.5</p> <p>SL18</p>
	 <p>Ø18</p> <p>67</p> <p>Ø18 CABLE ENTRY</p> <p>4-Ø5.5 HOLES</p> <p>PCD 54-56</p> <p>Ø70</p> <p>51.5</p> <p>QL18</p>	

■ QTG70L - Pole Mounting Type Model

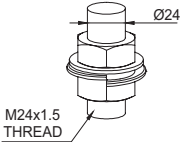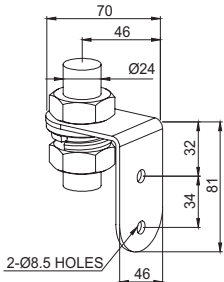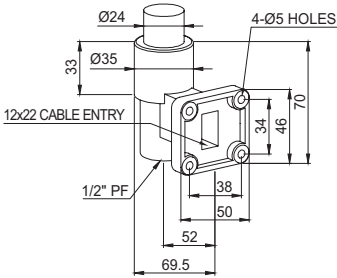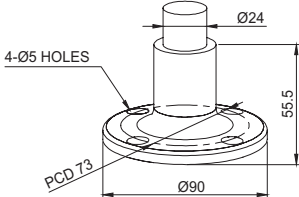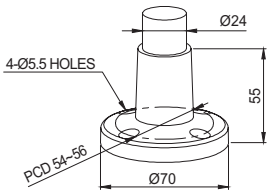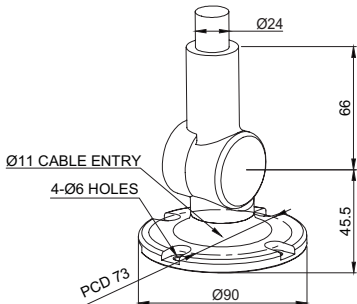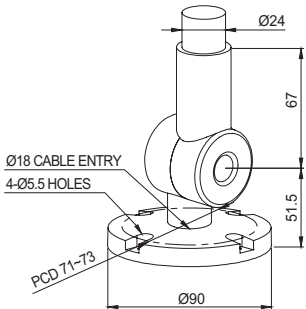	Dimensions	
QTG70 series	 <p>M24x1.5 THREAD</p> <p>Ø24</p> <p>24mm SCREW & NUT</p>	 <p>70 46 Ø24 46 81 32 34 2-Ø8.5 HOLES</p> <p>LB24</p>
	 <p>Ø24 33 Ø35 12x22 CABLE ENTRY 1/2\" PF 4-Ø5 HOLES 70 46 34 38 50 52 69.5</p> <p>LW24</p>	 <p>Ø24 4-Ø5 HOLES PCD 73 Ø90 55.5</p> <p>SZ24</p>
	 <p>Ø24 4-Ø5.5 HOLES PCD 54-56 Ø70 55</p> <p>QZ24</p>	 <p>Ø24 66 Ø11 CABLE ENTRY 4-Ø6 HOLES PCD 73 Ø90 45.5</p> <p>SL24</p>
	 <p>Ø24 67 Ø18 CABLE ENTRY 4-Ø5.5 HOLES PCD 71-73 Ø90 51.5</p> <p>QL24</p>	


Product installation direction

- Install the product in accordance with the manual. Otherwise rainwater or moisture may penetrate into the product.

· BEACON/SIGNALING LIGHT

※ For products with a protection rating of less than IPX4, please install it vertically.

Power cord inlet part shall not be facing the sky.

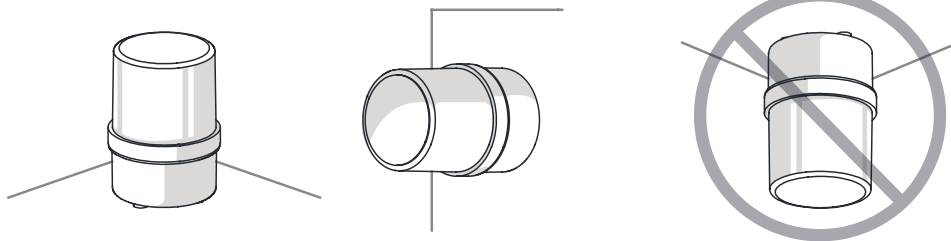


· ELECTRONIC SOUNDER/SIGNAL HORN

Sounder part shall not be facing the sky.



· HEAVY-DUTY & EXPLOSION PROOF SIGNALINGS


Sounder part shall not be facing the sky.

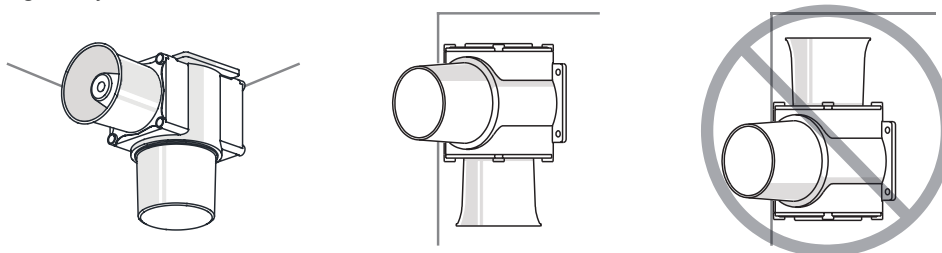


· SIGNAL TOWER LIGHTS

※ For products with a protection rating of less than IPX4, please install it vertically.

Power cord inlet part shall not be facing the sky.

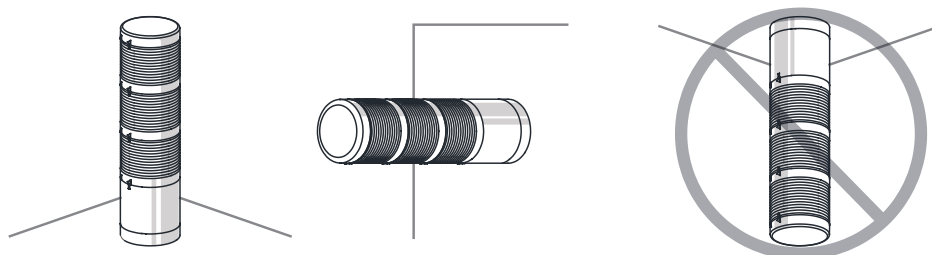

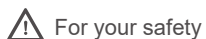

For your safety

Specification and dimensions listed in this catalogue subject to change without notice for product quality improvement.
The newest product information is available on our website.(www.qlight.com)
Please read the instruction manual attached to the product carefully before installation and use.

Qlight Co., Ltd. www.qlight.com | trade@qlight.com

Head Office | Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea

Tel. +82-2-2679-6152(Toll free. +82-80-328-2222) Fax. +82-2-2679-6154

Factory | 185-25, Mukbang-ro, Sangdong-myeon, Gimhae-si, Gyeongsangnamdo, Korea Tel. +82-55-328-1111(Toll free. +82-80-328-1111)

Qlight Overseas Sales Dept | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel : +82-51-620-4100

Qlight Public Relations & Marketing Team Office | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel. +82-51-245-0017

SHANGHAI Qlight Electronic Co., Ltd. www.qlight.com www.qlightcn.com | qlightcn@qlight.com

China Factory/ Shanghai Sales Office | #Room 333 Building B, #11, Lane 450, Zhenda Road, Baoshan District, Shanghai, China

Tel. +86-21-6651-7100 Fax. +86-21-6315-3929

China Factory Site 2 (Qidong) | #33, Haiyan Road, Qidong High-tech Industrial Development Zone, Qidong, Jiangsu Province, China

Tel +86-513-8384-9999 Fax +86-513-8384-9910

Qlightec

Innovation in Alarm & Signal

Product Operation Inquiry / Customer Support +82-51-620-4100

You can expect prompt service if you have exact information such as model name, symptom, telephone number and address.

※ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE.

Head office : Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea (Postal Code : 08507)

Factory : 185-25, Mukbang-Ro, Sangdong-Myeon, Gimhae-Si, Gyeongsangnam-Do, Korea (Postal Code : 50805)

www.qlight.com

EN - QTG50ML - 2404A